

5 MEDIA GUIDES


T SELF TEST

M MAINTENANCE With Every Media Roll

i MORE INFO

Refer to your CD-ROM for more detailed information. Refer to the Cognitive web site for the latest firmware and software upgrades, including printer drivers.

Contact Cognitive for all your supply needs, including media and cleaning pens.

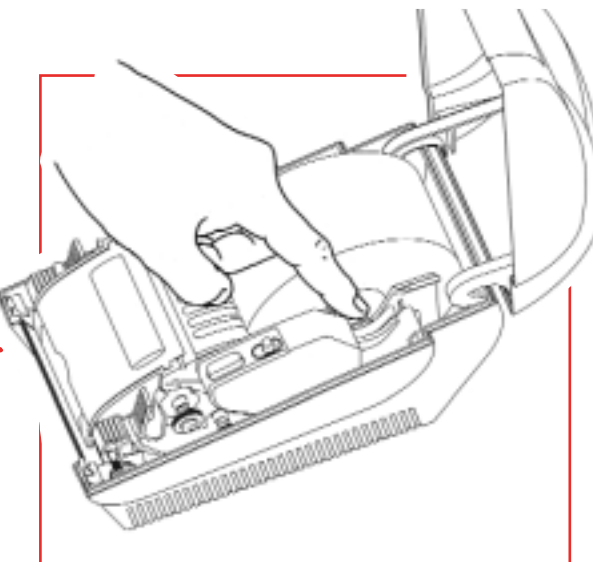



With the media roll loaded, press the green guide lock for easier media installation next time.

- Press the illuminated READY button once. The light goes out.

- Hold the blue FEED button and press READY once. Release the blue FEED button when the printer starts to print a self test label.

- Press READY twice to return to normal operating mode.

Important! After performing a self-test, the printer is placed in data dump mode and cannot print normal labels until you press READY twice.

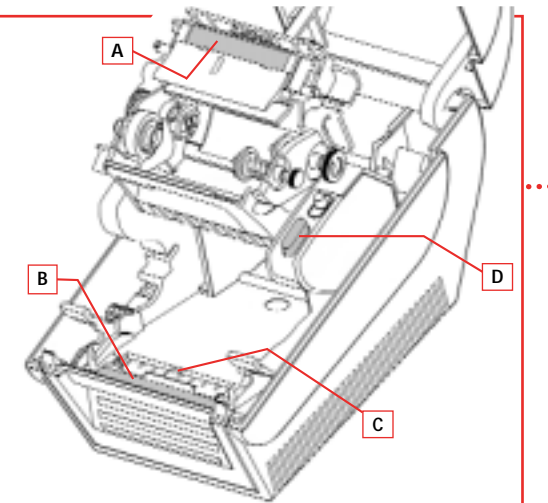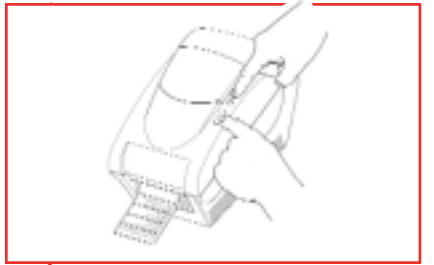

Clean the print head (A), drive roller (B) and the index sensor (C) with a soft, lint free cloth saturated with 99% isopropyl alcohol. Press the FEED button (D) to clean all sides of the roller.

Caution! Incorrectly cleaning the printer will cause permanent damage and void the printer's warranty. Cognitive recommends using a certified cleaning pen for all your printer's cleaning requirements, P/N 60-14-00-0002.

General Mailing Address:
691 Corporate Circle
Golden, CO 80401
Tel: 303.273.1400
Toll Free: 800.525.2785
Fax: 303.273.1414
Website: www.cognitive.com
E-mail: info@cognitive.com

Technical Support
Toll Free: 888.715.7190
Fax: 303.590.0518
E-mail: techsup@cognitive.com

Europe
Atlantic Street
Altrincham, Cheshire, WA14 5QJ
United Kingdom
Tel: 44.161.929.9933
Fax: 44.161.927.7664
E-mail: europesales@cognitive.com

Asia-Pacific
PO Box 677
Level 3, 39 Leighton Place
Hornsby NSW 2077 Australia
Tel: 61.2.9477.1999
Fax: 61.2.9477.1453
E-mail: asiasales@cognitive.com

Japan
2-23-2 Higashi-ikebukuro
Toshima-Ku
TOKYO 170-0013 Japan
Tel: 81.3.5391.7681
Fax: 81.3.5391.7692
E-mail: japansales@cognitive.com

WARNING - SHOCK HAZARD and STATIC DISCHARGE:



Never operate the printer in a location where it can get wet, personal injury could result. The discharge of electrostatic energy that accumulates on the surface of the human body or other surfaces can damage or destroy the print head or electronic components used in this device. DO NOT TOUCH the print head or the electronic components under the print head carriage.

CAUTION - PRINTER SETUP & HANDLING:



ALWAYS TURN POWER OFF before: (1) connecting any cables (2) performing any cleaning or maintenance operations, (3) moving the printer.

FCC DECLARATION OF CONFORMITY:



Class B: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

CE DECLARATION OF CONFORMITY:



This is a Class B digital device applying EMC Directive 89/336/EEC and Low Voltage Directive 73/23/EEC.

INDUSTRY CANADA NOTICE:

This Class B digital apparatus complies with Canadian ICES-003.

CONFORMANCE NOTE:

Some Del Sol configurations are Class A digital devices. Check the serial number label on the printer for the conformity rating. FCC Class A devices are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.


 
Copyright © 2000-2001 Cognitive. Cognitive™ and Del Sol™ are trademarks of Cognitive. No part of this manual may be reproduced for any purpose or in any form, including electronic storage and retrieval, without the express permission of Cognitive.

QUICK START




Cognitive

1 POWER & CABLES

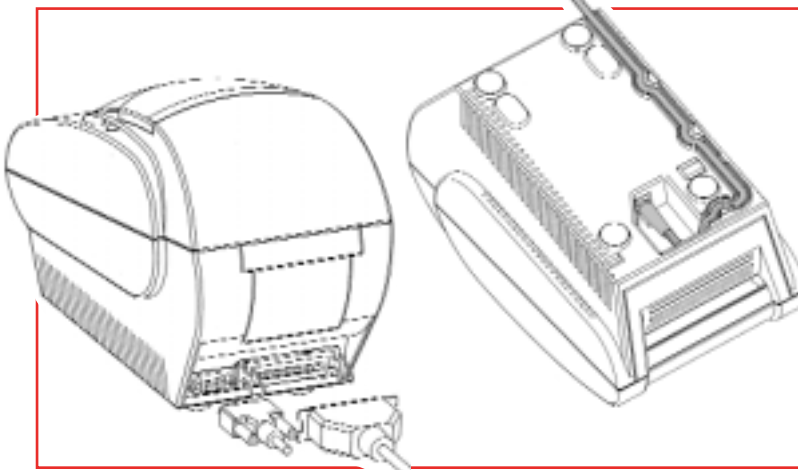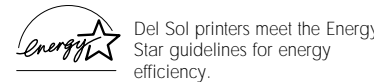

Connect a parallel cable or a null modem serial cable to the back of the printer. Connect the power cable under the printer, then route the cable through the cord channel and plug in.


2 OPEN

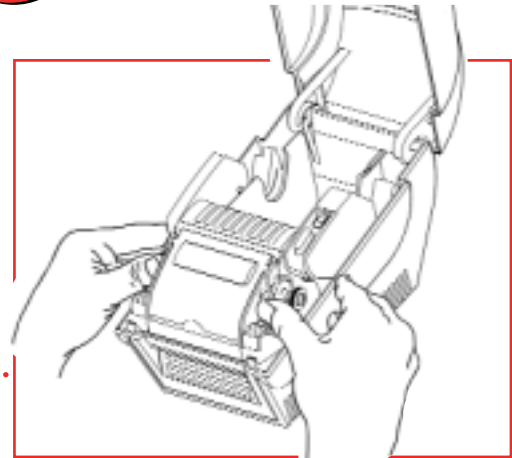


Open the dust cover. Press the black latches to release the print mechanism, then lift the mechanism until it locks in place.

Note: The printhead latches require some force to release.

3 RIBBON (Thermal Transfer Only)

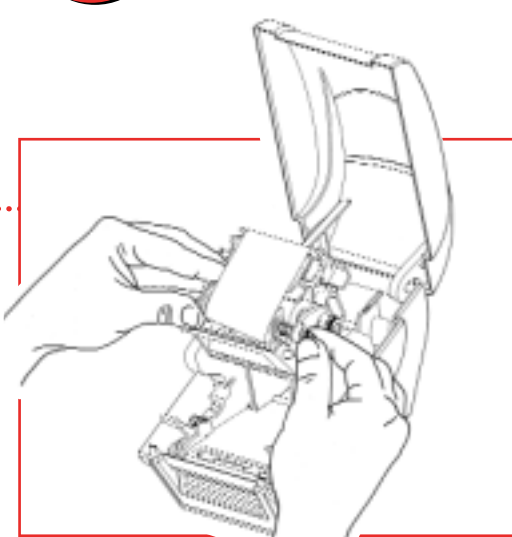


A. Pull out the small green knob and hold. Align the ribbon supply roll notches with the mounts and release the knob.

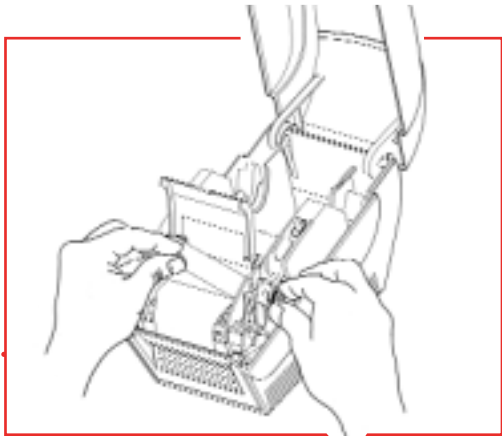


B. Lower the print mechanism and open the mechanism cover. Install the take-up core in the same way as the supply roll. Turn the take up knob clockwise until the ribbon is taut.

Note: A little wrinkling in the ribbon is normal and will not cause printing problems.


4 MEDIA

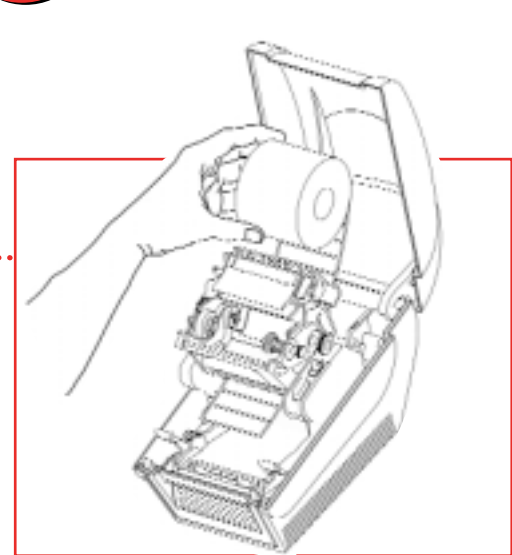

A. Load the media with the imaging side face up.

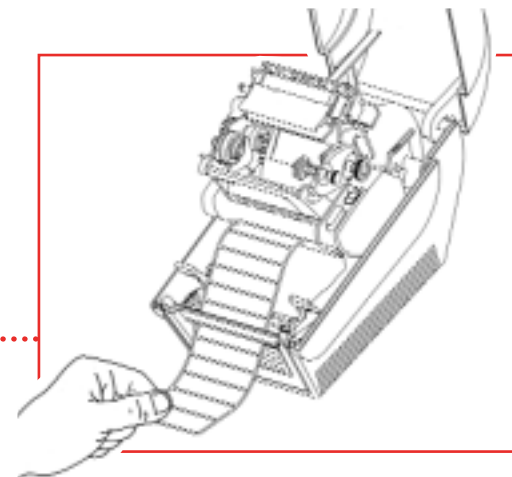

B. Slide the media under the print head and through the slot in the front panel. Pull the media taut.

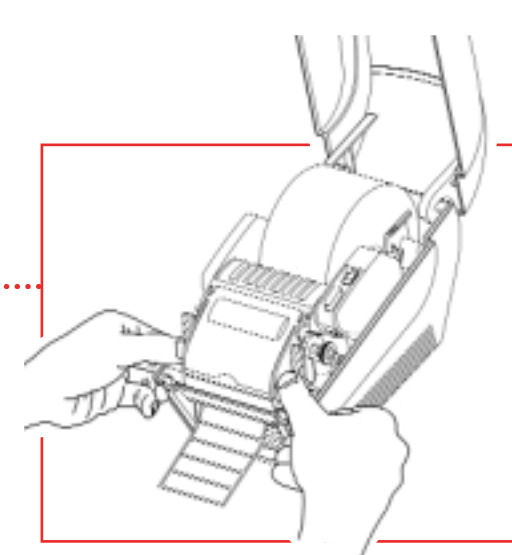

C. Lower the print mechanism and press down firmly to secure both latches.

Note: The latches click when fully closed.